

*business*phone
...it's your business



User's Guide

BUSINESSPHONE 250
BUSINESSPHONE 50

Standard Telephone
Economy*plus* Telephone

ERICSSON 

BUSINESSPHONE 250 / BUSINESSPHONE 50 – VERSION 5.0
STANDARD / ECONOMY^{plus} TELEPHONES, DIALOG 3211 / 3212

USER'S GUIDE

Copyright © 2000. Ericsson Austria AG. All rights reserved.

This document contains proprietary information which is protected by copyright. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system, or translated into another language, without prior written consent of Ericsson Austria AG, Vienna, Austria.

The information in this document is subject to alteration without prior notice.

ERICSSON MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Ericsson shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Ericsson Austria AG
Pottendorfer Strasse 25-27
A-1121 Vienna, Austria
Telephone: +43-1-81 100-5450
Telefax: +43-1-81 100-5437
<http://www.ericsson.at>

CD-ROM

On the CD you will find helpful products and your user's guide in electronic format.

Hardware requirements:

CPU Pentium 166MHz, 32 MB RAM
15 MB free memory on hard disk (optional)
VGA 800*600, 8 bit, 256 colors
Sound card (recommended)
CD-ROM drive (12x)

Software requirements:

Operating system: MS Windows 9x, MS Windows 2000 or
MS Windows NT 4 (service pack 3 or higher)

No CD-ROM?

Please send an e-mail to:
businessphone.documentation@sea.ericsson.se
and we will send you a personal copy for free!

Designation Card Manager

The Designation Card Manager is the tool for designing and printing your personal designation cards.

Also included

All user documentation as pdf-files, a quick reference help system, a screen saver and a demo version of our BusinessPhone Computer Based Training tool.

Welcome to the User's Guide for the Standard and Economy^{plus} telephones in the BusinessPhone 250 / BusinessPhone 50 system from Ericsson.

It is a state-of-the-art business communications system. Its alliance of features and facilities effectively improves communications for virtually any kind of organization. To take full advantage of these advanced features and facilities there is a line of phones, designed for ease of use in every situation.

Your phone is equipped with programmable keys for single-key access to frequently used functions and numbers. On the Standard phone, step-by-step instructions in the display assist your actions on the phone. Only a selected number of display images, however, are shown in the User's Guide for your reference.

Note: The features described in this user's guide are related to version 5.0 of the BusinessPhone 250 / BusinessPhone 50 system, some features described in this guide might not work in earlier version of the system.

Some features described in this user's guide might be protected by a hardware dongle that has to be bought separately.

The User's Guide describes the facilities of the BusinessPhone system and the telephones with factory default programming. There may be some differences in the way your phone is programmed. Please consult your system administrator if you need further information.

Function descriptions that do not include speaking in the handset, are described as off-hook, if nothing else is stated. Instead of pressing the "Clear-key", you can always replace the handset.

The dual-functions keys allow two functions to be combined on the same keys, the primary shown above and the secondary shown below the line.

To access the secondary function, you just press the key 2nd and then the function key.

Note: Dialog 3211 and 3212 are system telephones, i.e. they can only be used for an Ericsson private branch exchange that supports these types of telephones.

Example:

To access the Information function:

Press the key 2nd 

then press the combined key Message/Info 

Dialog 3211 / 3212
BusinessPhone 250 / BusinessPhone 50


Table Of Contents

	page
Description	5
Incoming calls	7
Outgoing calls	9
During calls	12
Call forwarding	17
Information	23
Internal messages	27
Mailbox system	31
Abbreviated numbers	35
Call metering	39
Group facilities	40
Other useful facilities	45
Security	52
Least Cost Routing	54
ISDN facilities	55
Optional equipment	61
Programming	64
Display info	67
Visible signals	68
Audible adjustments	69
Tones and signals	74
Glossary	75
Installation	77
Useful hints	79
Index	80
Quick reference guide	83

DESCRIPTION

The graphic below is valid for the Standard as well as the Economyplus telephone.

 Note: The Economyplus telephone is not equipped with a display.

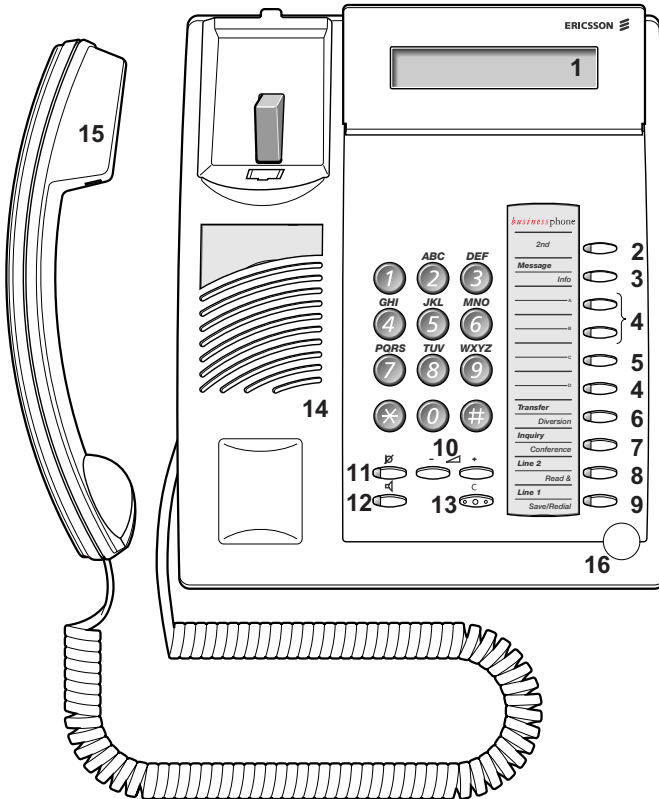

- 1 Display (Standard telephone only)**
2x20 characters. See section "Display info".
- 2 2nd**
Key for access to secondary key functions (These functions are stated on the second line of the corresponding key).
- 3 Message / Info**
 - a. To send and receive messages. See section "Internal messages".
 - b. Enter information. See section "Information".

(continued)

DESCRIPTION
(continued)

- 4 Dual-function programmable keys (A-D)**
Storing numbers and program functions.
See section "Programming".
- 5 Dual-function programmable key (C) / Headset key**
 - a. Storing numbers and program functions.
 - b. The headset function is only available with option unit (DBY 410 02) installed. The headset key is programmed by the system administrator. See section "Optional equipment".
- 6 Transfer / Diversion**
 - a. Transfer an ongoing call. See section "During calls".
 - b. Activate/Deactivate diversion. See section "Call forwarding".
- 7 Inquiry / Conference**
 - a. To make an inquiry to an internal or external party.
 - b. To establish a telephone conference.
See section "During calls".
- 8 Line 2 / Read & (Standard telephone only)**
 - a. Line key 2 for in and outgoing calls.
 - b. Read information (Standard telephone only).
See section "Information".
- 9 Line 1 / Save/Redial**
 - a. Line key 1 for in and outgoing calls.
 - b. Save or redial an external number. See section "Outgoing calls".
- 10 Volume control**
To adjust the volume. See section "Audible adjustments".
- 11 Mute**
To switch the microphone on or off. See section "During calls".
- 12 Loudspeaker on/off**
To switch the loudspeaker on or off. See section "During calls".
- 13 Clear**
To disconnect calls or to clear the display in programming.
- 14 Loudspeaker**
- 15 Handset with hearing aid function**
Please note: The handset may retain small metal objects in the earcap region.
- 16 Microphone**

INCOMING CALLS GENERAL

This section describes incoming internal and external calls.

Internal calls

A ringing signal and a flashing lamp indicates an incoming call. The display shows the number and the name of the internal caller (Standard telephone).

External calls

A ringing signal and a flashing lamp indicates an incoming call. If you are connected to a digital trunk line (ISDN), the display shows the number of the external caller and in case of diversion in the public net the display shows the number of the diverted as well as the calling party, see also section "ISDN facilities" (Standard telephone). A trunk line is the same as an external line.

ANSWER CALLS



Lift the handset

Handsfree



Press without lifting handset

or



Press without lifting handset

You are connected to the caller via the loudspeaker and microphone.



Press to terminate a handsfree call

(continued)

ANSWER CALLS (continued)

On another extension

You can answer a call to another extension from any phone in your office.



Call the ringing extension

You receive busy tone.



Press

Allow calls on line 2

If you want to receive calls also while speaking you first need to program "Free on 2nd access" on a programmable key. See section "Programming".

Free on 2nd access

Press to activate / deactivate Free on 2nd access (pre-programmed)

When Free on 2nd access is active the lamp lights and you can receive calls while speaking.

Answer a second call

You are on the phone, when a muted ringing signal and a line key flashes to indicate a new incoming call:

Line 2

Press the flashing line key

The first call is parked.

To switch back to the first call:

Line 1

Press the first line key

The second call is parked. You are connected to the first caller.



Press if you want to terminate the ongoing call

**OUTGOING CALLS
GENERAL**

Sometimes you make a call but the person isn't available. These functions will help you in your attempts to establish contact with the called party.

MAKE CALLS



How to make internal and external calls.

Lift the handset and dial either:



An extension number to make an internal call,

or



The digit(s) for external call access and the external number

Note: Which digit to press for external call access, depends on the configuration of the system.



or



To end the call

Note: You can make your calls faster, using common abbreviated numbers and by programming your own abbreviated numbers.

Handsfree

Without lifting the handset, just press a line key, or the loudspeaker key, or the first digit of the number. The call is in handsfree mode, via the loudspeaker and microphone.

**LAST EXTERNAL
NUMBER REDIAL**

When you initiate an external call the system automatically stores all the dialled digits, irrespective of whether the call was successful or not.



Press to redial the last dialled external number

The display will show the dialled number.

SAVE EXTERNAL NUMBER

When you make an external call, you can save the number in order to redial it easily. Previously saved number is erased.

Save number



Before you quit the call:

Press



Press to save the dialed number

Redial number



Press



Press to redial the saved number

AUTOMATIC CALL-BACK

You call an extension and receive busy tone or get no answer.

5

Press

Verification tone.



or



Press or replace the handset to finish the procedure

You are called back if the extension finishes the ongoing call or the next time the extension finishes a new call. You have to answer within eight seconds otherwise the call-back service is cancelled.



Lift the handset when you are called back

(You can also press the line or loudspeaker key to answer in handsfree mode.)

BUSY EXTENSION

You call an extension and receive busy tone.

Camp-on

You can notify a busy extension of your call by a muted ringing call (if this function is allowed).

④

Press to camp on

Keep the handset off hook. When the called extension replaces the handset, it will be called automatically.

Note: If you receive the busy tone again, the desired extension does not allow camp-on.

Intrusion

You can intrude on an ongoing call on a busy extension (if this function is allowed).

⑧

Press to intrude

Intrusion tone is heard and a three-party call is established. When the called extension replaces the handset and you keep off hook, the called extension will be recalled automatically.

Note: If you still hear the busy tone, then your extension does not have the authority to intrude or the desired extension is protected against intrusion.

DURING CALLS GENERAL

The BusinessPhone 250 / BusinessPhone 50 system allows you to handle calls in many different ways. You can switch between handset and handsfree/group conversation, mute the microphones, make an inquiry, transfer the call, create a conference or put the call on hold to perform other tasks.

GROUP LISTENING

You have an ongoing conversation via the handset.



Press to switch the loudspeaker on or off

When the lamp lights, the loudspeaker monitors the call.

Note: You can adjust the volume, see section "Audible adjustments".

FROM HANDSET TO HANDSFREE

You have an ongoing conversation via the handset.



Press to switch the loudspeaker on

You are now in the group listening mode.



Replace the handset

Handsfree conversation.

Note: You can adjust the volume, see section "Audible adjustments".



Press to end the call

FROM HANDSFREE TO HANDSET

You have an ongoing handsfree conversation.



Lift the handset

Conversation via the handset.

MUTE

You have an ongoing conversation.



Press to switch the microphones on or off

When the lamp lights, the caller will not be able to hear the conversation in your room.

INQUIRY

During an ongoing conversation you like to make an inquiry to an internal or external party.

Inquiry 

Press

The first call is put on hold (the lamp flashes slowly).



Call the third party

When the third party answers you can switch between the calls, create a conference and end one of the calls.

End inquiry



Press to end the inquiry call

The second call is disconnected.

Line 

Press to retake the first call

Now you are connected to the first party.

REFER BACK

You have an ongoing conversation on e.g. Line 2 and want to refer back to the parked call on Line 1. The lamp flashes at the parked call.

Line 1 

Press to park the second call

First call is connected.

Inquiry or Line 2 

Press to park the first call

Second call is connected.



Press to end the ongoing call

TRANSFER

You have an ongoing internal or external conversation and you want to transfer the ongoing call.

Inquiry 

Press



Call the third party

You can transfer the call before answer or wait for answer.

Note: Make sure, that you are connected to the desired party. Please read the notes and warnings in section "Useful hints".

Transfer 

Press

or



Replace the handset

The call is transferred. External calls might only be transferred with the Transfer-key, if this state of connection is allowed by the system-programming.

Transfer to a busy extension

You can even transfer calls to busy extensions. The other party will hear a muted signal (camp-on), and the call will be extended, as soon as the ongoing call is terminated (if camp-on is allowed).

Call-back

You are called back, if you have transferred an external call and the other extension has not answered the call within a certain time. Your telephone will ring again.

CONFERENCE

You have an ongoing conversation and you want to establish a telephone conference.

Inquiry 

Press



Call the third party

2nd 

Press

 
Conference 

Press to establish a three party conference

Now you have established a three party conference. To mark the conference, all conference members will hear a periodical conference tone.

Repeat the procedure to include other persons to the conference

In this way, you can include up to six parties in a conversation. How many of them can be external callers depends on the programming of the system.



INDIVIDUAL HOLD

You have an ongoing conversation, i.e. the "Line 1"-key is lit. Now you want to park the ongoing call for a short while.

Line 1 

Press the line key

The lamp flashes slowly.

Line 1 

Press again to retake the parked call

COMMON HOLD

Hold 

Press (pre-programmed)

The line key lamp flashes slowly. The call can be picked up on any extension within one minute, or else it will recall on the holding extension.

Line 1 

Press to pick up on own extension

or

Pick up on another extension:



Call the extension that put the call on hold



Press

**CALL FORWARDING
GENERAL**

When you are not available to take calls or decide to answer your calls on another extension, it is useful to forward your calls to an alternate answering position. If you urgently need to talk to someone who has forwarded his calls, the system is also equipped with a bypass function.

Depending on the type of diversion you are also able to record your personal greeting, see section “Personal greeting”.

Note: You can still make calls as usual.

Diversion on no reply

If you are not available to answer incoming calls (internal or external), your system administrator can program your extension to automatically divert calls to a programmed diversion address (default time: 15 seconds).

Diversion on busy

If your extension is busy and you receive an incoming call (internal or external), your system administrator can program your extension to automatically divert the call to a programmed diversion address.

FIXED DIVERSION

This function directs your calls to a pre-programmed answering position (e.g. secretary).

Activate fixed diversion

 
2nd 

Press

Diversion 

Press to activate diversion

All calls to your extension are directed to a pre-programmed address. The display shows the actual diversion state.



Cancel diversion

2nd 

Press

Diversion 

Press to cancel diversion

PROGRAM FIXED DIVERSION ADDRESS

If you need to program a new diversion address:



Dial to start programming



Press



Press



Dial new diversion address



Press



Press



 
Press to finish the procedure

**INDIVIDUAL
DIVERSION**

This feature gives you the possibility to divert your calls to internal and external positions, e.g. to any directory number, a colleague's extension, an external number or a common abbreviated number (e.g. your car telephone).

Note: In order to prevent misuse, individual external diversion can be blocked for your extension, see section "Security".

**Program and activate
internal diversion**



Divert your calls to an internal position.

Press



Press and dial the new directory number

Any directory number.



Press



Press

Verification tone. The diversion lamp lights and remains lit. The display shows the actual follow me state.



Press to finish the procedure

You can make outgoing calls as usual. A special dial tone reminds you that "Call forwarding" is active.

Note: An individual internal diversion cannot be activated if an individual external diversion is already activated.

**Cancel internal
diversion**



Press



Press

Individual diversion is cancelled. The lamp extinguishes.

(continued)

INDIVIDUAL DIVERSION (continued)

Program and activate a new external diversion address



To set a new individual external diversion address:

Dial



Dial the digit(s) for external call access and enter the new external diversion address

A maximum of 24 digits.



Press to activate the individual diversion

Verification tone.



Press to finish the procedure

Note: Individual external diversion can also be used via the DISA function, see section "Other useful facilities".

Cancel external diversion



Dial



Press

Note: The programmed diversion address is not removed from the memory, the diversion is just inactive.

Re-activate external diversion



Divert your calls to an external position.

Dial to activate the programmed external diversion

You can make outgoing calls as usual. A special dial tone reminds you that "Call forwarding" is active. The display shows that you have activated an external diversion.



Press

FOLLOW ME

 
If you are in another room, you can still answer your calls by forwarding them to where you are. To activate Follow me, "Individual Diversion" must be active on your telephone.

Activate Follow me

Note: This procedure has to be executed from the telephone the calls are diverted to.



Dial



Dial your number and press



Dial the new number and press

Special dial tone.



Press to finish the procedure

Cancel Follow me

Follow me and individual diversion can also be cancelled from the answering position.



Dial



Dial your number



Press

Dial tone.



Press to finish the procedure

BYPASS CALL FORWARDING

Bypass call forwarding makes it possible to call a specific extension, even if call forwarding is activated on this extension.



Dial



Enter extension number



Press

You will be connected to the specified extension, regardless of which type of call forwarding the called extension has activated.

INFORMATION GENERAL

If you are not in the office for a certain period of time (e.g. meeting, vacation, lunch, illness), this feature allows you to inform your callers why you are absent. External callers will be routed to the operator who also has access to your absent info.

Note: When you have activated a diversion with a personal greeting, callers will receive this greeting instead of your activated absence information.

You can inform your callers with:

1) Pre-defined texts

Enter the reason for your absence and the date and time of your return.

2) Voice information

Record a voice message and name your absent information.

ENTER INFORMATION

To store text or voice information.

2nd  Info 

Press

When the information is activated, the Message/Info lamp shows a steady light. If a message arrives, the lamp starts flashing, see section “Check and store received messages”.

Select “Pre-defined text” or “Voice information”

(continued)

ENTER INFORMATION
(continued)

Pre-defined texts



Enter "Code" and



Enter "Completing info" from the table below

	<i>Code</i>	<i>Completing info</i>
Time of return	1	hour (00-23) minute (00-59)
Date of return	2	month (01-12) day (01-31)
Lunch	3	back at, hour minute
Meeting	4	back at, hour minute
Vacation	5	back, month day
Illness	6	back, month day



Press to enter the information



Press to finish the procedure

The programmed absence info will be shown in the display. Internal callers receive the information on the display (or as spoken information to callers without display phone).

Pre-defined texts

Example:

Vacation, back June 27

2nd Info




If you do not know the time of return, just press #. Information active. Internal callers receive the information on the display (or as spoken information to callers without display phone). External callers will be routed to the operator who also has access to your absent info.

Voice information

2nd  **Press**

Info   **Press and speak**

 **Press to play-back and listen to your recording**

 **Press and speak to re-record**

 **Press to activate**
Information active.



Press to finish the procedure

Internal callers will hear the information via the handset or the loudspeaker. External callers will be routed to the operator who also has access to your absent info.



Note: You can dial your own extension number if you want to check your information.

**ERASE INFORMATION,
SAVE INFORMATION**

2nd  **Press**

Info    **Press to erase info**

or

Info   **Press to deactivate and save for later use**
Information is passive.



Press to finish the procedure

(continued)

ERASE INFORMATION, SAVE INFORMATION (continued)

Use saved information

2nd 

Info  

C 

When the information is switched off:

Press

Press to activate saved info

The Message/Info lamp lights. Information is active.

Press to finish the procedure

RECEIVE INFO FOR DIVERTED CALLS

Note: This chapter only applies to the Standard telephone.


A colleague, Andersen, has programmed diversion to your extension. You answer a call to Andersen on your phone. The sign '&' or '%' indicates that Andersen has text or voice info programmed.

Text info programmed

ANDERSEN A	200%
BURNES B	210 S

2nd 


Press

Read & 

Press and hold to read text info

Voice info programmed

ANDERSEN A	200%
BURNES B	210 S

Inquiry 

Press



Dial Andersen's number to receive the voice information


INTERNAL MESSAGES

GENERAL

You can send a call-back or a voice message when you call an extension and receive busy tone or get no answer. This section also describes how to record an ongoing conversation and a personal voice message. Your incoming messages are indicated on your telephone by a rapidly flashing message-key.

SEND MESSAGE

To send a message to an extension when you receive busy tone or get no answer.

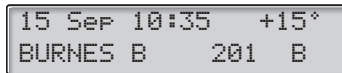

Call-back

Message 

To send a "call me" message.

Press



Press to send

Voice

Message 

To send a voice message.

Press



Press and speak a voice message



Press to play-back and listen to your recording



Press and speak to re-record



Press to send

CHECK AND STORE RECEIVED MESSAGES

You can check and store your received messages.

Received messages are divided into following three categories:

- New messages (not heard or read)
- Heard/Read messages
- Stored messages

Note: Messages are deleted from the system after a certain time. The time depends on which category the message belongs to. Please ask your system administrator regarding this.



Press to view mailbox

If the mailbox contains heard messages only, the lamp shows steady light instead. You can check and store your received messages. Up to 20 messages can be stored.

Voice messages will be heard via the speaker or the handset. "Call me" messages will call the sender automatically (these messages cannot be stored).

Note: Depending on the configuration, you might be asked for your password before you can retrieve your messages. See section "Security".



Press to finish the procedure

DICTAPHONE

If you want to record and retrieve personal voice messages you can use the dictaphone. A dictaphone message is treated as a normal message. How to retrieve dictaphone messages, see section “Check and store received messages”.

Record message

To start the recording:



Dial and record your message

The maximum recording time is four minutes and 15 seconds.



Select options below:



Press to play-back



Press and speak to re-record



Press to stop the recording and save the message

CONVERSATION RECORDING

The conversation recording function makes it possible to store the ongoing telephone conversation in the individual mailbox by pressing a pre-programmed recording key. You can store both internal and external calls. Conference calls cannot be stored.

A recorded conversation is treated as a normal voice message. How to retrieve conversation recordings, see section “Check and store received messages”.

Note: This feature may be restricted or not available. Ask the system administrator for the availability and for more information. Furthermore, a conference tone can be audible during the entire recording.

To start or stop recording the ongoing call:

Recording 

Press the recording key (pre-programmed)

While recording is active a steady light indicates that the conversation is being recorded. You can start or stop the recording whenever you want. The maximum recording time is four minutes, if you want to record a conversation longer than four minutes, just repeat the procedure. To program the key, see section “Programming”.

Warning!

Recording a conversation without prior notice to the other party may be an illegal act. Forwarding or playback of this recorded conversation to a third party without prior permission may be an illegal act.

It is obligatory for the recording initiator, to ask the other party in advance for permission and to inform the same of the purpose and further usage of this particular recording. The adherence to the relevant legislation is the exclusive responsibility of the user, offences can be criminally prosecuted. Neither the manufacturer nor the dealer of this product is responsible for the abuse of this feature by the user or for any damages caused thereby.

**MAILBOX SYSTEM
GENERAL**

While you are away from the office, callers can leave messages in your individual or in a common mailbox. You are also able to record your personal greeting, see section “Personal greeting”.

The difference between your individual mailbox and a common one is that a common mailbox can be used for more than one user.

**INDIVIDUAL MAILBOX
SYSTEM**

Callers are able to leave messages in your individual mailbox.

Activate

Divert your extension to the mailbox system.



Press



Press



Press



Dial the number to the mailbox system

Please ask the system administrator for your defined mailbox number.



Press



Press



Press to finish the procedure

When the diversion to your mailbox is activated, the Diversion lamp shows steady light.

(continued)

INDIVIDUAL MAILBOX SYSTEM (continued)

Deactivate

2nd  **Press**

Diversion  **Press**

Retrieve messages - internally

Message 

The message lamp flashes rapidly.

Press to retrieve a message

See section “Check and store received messages”.

Retrieve messages - externally



To retrieve your messages from an external position:

Dial your company’s telephone number

Dial the number to the mailbox system

During the procedure you will be asked for your extension number and your password.

COMMON MAILBOX SYSTEM

Callers are able to leave messages in the common mailbox.

Activate



Press

2nd  **Press**

Diversion  **Press**

Divert your extension to the mailbox system.



Dial the common mailbox number

Please ask the system administrator for your defined mailbox number.



Press



Press



Press to finish the procedure

When the diversion to your mailbox is activated, the Diversion lamp shows steady light.

Deactivate



Press



Press

Retrieve messages - internally



Press the common mailbox key (pre-programmed)

During the procedure you will be asked for your extension number and your password. See section "Security".

Retrieve messages - externally

To retrieve your messages from an external position:



Dial your company's telephone number



Dial the common mailbox number

During the procedure you will be asked for your extension number and your password.

PERSONAL GREETING

Depending on the type of diversion you want to activate, you can leave three different personal greetings to the caller. The diversion state can be on no reply, on busy or an activated individual diversion.



Dial

During the procedure you will be asked for your extension number and your password.



Press to configure your personal greeting



Enter diversion code

Select an option below and follow the voice announcements.

<i>Type of diversion</i>	<i>Code</i>
Diversion greeting on busy	1
Diversion greeting on no reply	2
Individual diversion greeting	3



Press to store the recorded greeting

When you activate the diversion, the recorded greeting is played to the next caller.



Press to finish the procedure

Note: When you have activated a diversion with a personal greeting, callers will receive this greeting instead of your activated absence information.

ABBREVIATED NUMBERS GENERAL

By using abbreviated numbers, you can make calls simply by pressing a few keys. Frequently used external numbers are stored as "common abbreviated numbers" in the exchange. Up to 14 "individual abbreviated numbers" (your personal most frequently used external numbers) can be stored and used. You have two options to do this:

Option 1

Via a programmable key

4 individual abbreviated numbers can be programmed on the keys A to D.

*Note: Functions that you activate/deactivate via a dial code, e.g. *32* and #32# for reminder, can also be stored as individual abbreviated numbers.*

Option 2

Via the keypad

10 individual abbreviated numbers can be programmed on the keys "**0" to "**9".

COMMON ABBREVIATED NUMBERS

External numbers are stored centrally in your BusinessPhone system. Common abbreviated numbers have a maximum of 4 digits and can be dialled from every extension that has the authority to do so.



Dial the common abbreviated number

Please refer to your telephone directory.

INDIVIDUAL ABBREVIATED NUMBERS VIA A PROGRAMMABLE KEY

You can program and activate your most frequently used external numbers on the 2nd layer of a programmable key. This procedure can also be used if you want to program a function that is activated/deactivated via a dial code.

(continued)

INDIVIDUAL ABBREVIATED NUMBERS VIA A PROGRAMMABLE KEY (continued)

2nd  Press

Airport  Press to make a call or activate a dial code (pre-programmed)

 
Program individual abbreviated number

How to program external numbers or dial codes on the keys A to D.



Enter programming mode

2nd  Press



Press a programmable key



Dial the digit(s) for external call access and dial the number

Which digit to press for external call access, depends on the configuration of the system. The number can consist of up to 24 digits.

or



Dial a code



Press the programmable key again



Press to finish programming

Note: The dual-function keys allow individual abbreviated numbers and other functions e.g. dial-by-name to be combined on the same keys. You can remove the transparent cover in order to write the names beside the keys. Put the name referring to the individual abbreviated number in the field below the line to indicate that it is the secondary function.

INDIVIDUAL ABBREVIATED NUMBERS VIA THE KEYPAD



You can program and activate your most frequently used external numbers via the keypad.

Press and dial the abbreviated number

A number between 0 and 9.

Program individual abbreviated number



How to program external numbers on the keys 0 to 9.

Enter programming mode



Select an abbreviated number between 0 and 9 and press



Dial the external number and press

The number can consist of up to 24 digits.



Press to finish programming

Cancel one specific individual abbreviated number



Press



Enter an abbreviated number between 0 and 9 and press

Cancel all individual abbreviated numbers




Press

Confirmation tone.

DIAL-BY-NAME

You can program and activate directory numbers (extensions and common abbreviated numbers) on the programmable keys.

Thomas P 

Press to make a call (pre-programmed)

Program dial-by-name

How to program an internal directory number on a key A to D.



Enter programming mode



Press a programmable key



Press

 


Press the programmable key again



Dial the number

You can use any directory number, e.g. a common abbreviated number or a colleague's extension number.



Press the programmable key again



Press to finish the procedure

CALL METERING GENERAL

Note: This chapter only applies to the Standard telephone.

When the BusinessPhone system is provided with metering information from the public net, the call metering function can be used to check the costs of outgoing calls. The BusinessPhone system offers several options to obtain this information.

COST INDICATION

During an outgoing external conversation the display shows the actual costs. If you want to deactivate the cost indication,



Dial

Verification tone, the cost indication is deactivated.



Press

To activate the cost indication again for all further calls, repeat the procedure.

COST OF THE LAST CALL

After finishing an outgoing external call, you have the possibility to see the cost of the last call.



Dial

The display shows the cost of the last call.



Press to finish the procedure

READ OUT YOUR OWN COST COUNTER

This is useful, when you want to check the accumulated costs of your own counter.



Dial

The system shows the accumulated costs since the last reset.



Press to finish the procedure

GROUP FACILITIES GENERAL

When you are working together in a team the following group facilities can be very useful. You can page your colleagues, give them telephone attendance or pick up their incoming calls.

KEY SYSTEM

With this function, all (or selected) external lines are represented by pre-programmed keys on all phones. For each external line, a function key has to be programmed. Which means that you are able to monitor the state of traffic for every programmed external line (e. g. free, busy). You can also establish an external call by pressing the external line key.

Answer an external call

To answer an external call, just press the flashing key. (Depending on the programming of the system, an incoming external call will be announced with a flashing line-key and a ringing signal).



Press (pre-programmed)

Speech connection with the caller.

Make an external call

To initiate an external call, just press the external line key. The external line will be seized automatically.



Press a free line-key (pre-programmed)



Dial the desired number

If you make external calls in this way, you do not have to dial the digit(s) for external call access first.

SUPERVISION / TELEPHONE ATTENDANCE

A function-key can also be programmed for supervision and handling calls for a group of extensions. If a supervision/attendance-key is programmed on your telephone, you are able to call the other group-members or answer incoming calls for the group by pressing the key and monitor the activity of other extensions (free, busy, called).

Traffic situation

Michael 

Ongoing conversation (lamp is on)

Michael 

Free extension (lamp is off)

Michael 

The extension is called (flashing lamp)

Pick-up calls for the group


Your colleague's extension is indicated on your phone by a pre-programmed key.

Michael 

**Press to answer the calls directly
(pre-programmed)**

A flashing lamp beside the key indicates an incoming call.

Call a group-member

Michael 

**Press to make the calls directly
(pre-programmed)**

Note: If the key is flashing, you will automatically pick-up your colleague's ongoing call.

GROUP HUNTING

Your telephone can be included in one or several hunt groups. In a hunt group all members are represented with one common directory number. 16 hunt groups can be programmed, each containing 1 to 20 members. A member can be either an extension number, an operator console or a fictive number. Please ask your system administrator if you require this function.

Note: The number of cordless extensions in a hunt group are limited to eight (including tandem configurations).

Incoming calls to the hunt group are directed to free extensions in the group. The hunt order within the group can be changed to suit your needs. If all members of the hunt group are busy, an incoming call is presented with a special ringing signal to line 2. If no one answers this call before the programmed time, the call is forwarded to the programmed answering position (e.g. operator).

Note: If all members in a hunt group are busy, the call-back or intrusion functions are not available, however the camp-on function can still be used.

Log in

⊛ 2 8 ⊛

Before you can answer group hunting calls, you must log in.

To log in to one hunt group:

Dial

○ ○ ○ ○ ⊛

Dial the hunt group code and press

Please ask your system administrator for the configured number.

To log in to all hunt groups:

⊛ 2 8 ⊛

Dial

⊛ ⊛

Press

Answer calls

Answer group hunting calls in the normal way.

Log out

2 8 *

To log out from one hunt group:

Dial

Dial the hunt group code and press

Please ask your system administrator for the configured number.

Note: If you are logged in to more than one huntgroup and log out from one of them, the display will show the following text:

PBX GRP. LOGGED OUT

To log out from all hunt groups:

2 8 *

Dial

* #

Press

**GROUP CALL
PICK UP**

In a Pick up group, any member can answer any individual call to group members. You answer a call to the group by dialling a special answering number. Please ask your system administrator for the configured number.

○ ○ ○ ○

Dial the group call pick up code

LOUDSPEAKER PAGING

You can page all extensions in a group and give a voice message.



Press (pre-programmed)

All extensions in a group are called.



Press again and hold the key (pre-programmed)

Give the voice message and then release the key.

Now you can wait for answer, or terminate. If you do not get an answer within 30 seconds, the paging function will be terminated automatically.

Answer paging

A short signal and a flashing "Paging"-key will inform you when a loudspeaker paging is received.



Press (pre-programmed)

An internal call is established with the paging party.

COMMON BELL

The common bell facility allows all extensions of the system (operator included) to pick up the call from an extension that has been predefined as a common bell extension.



Dial the common bell pick up code

Please ask your system administrator for the common bell pick up code. You will immediately be connected with the calling party.

If two or more extensions simultaneously attempt to answer a call from the common bell extension, only the first extension will pick it up. The other extensions will receive the "number unobtainable" tone and their displays will show the message "No call waiting at common bell".

This will also happen if you dial the common bell pick up code and there are no calls waiting at the common bell extension.

Note: You can also program the common bell code on a function key.

OTHER USEFUL FACILITIES GENERAL

By using these facilities your productivity will be increased, e.g. you can set reminders for important meetings, place the costs for external calls on separate accounts, listen to music via the loudspeaker and much more...

REMINDER

The phone can be set to remind you at any time within the next 24 hours (multiple settings are allowed).

 


Dial



Dial reminder time and press

(00-23) hour + (00-59) minute. Delete the at last entered digit with the "minus" key. Example: 1430.



Note: If you receive busy tone, your extension does not have the authority to set a reminder.



Press to finish programming

When the reminder time is reached, your phone rings with recall signal.

Cancel reminder



Dial to cancel all settings



Press to finish the procedure

ACCOUNT NUMBER

You can place the costs for external calls on a selected account number (up to 15 digits).

Enter account number before the call



Dial



Enter account number and press
Internal dial tone. Make the external call.

Enter account number during the call

If your telephone has a pre-programmed account number-key, you can also enter an account number during a call.

Account number 


Press (pre-programmed)



Enter account number and press

BACKGROUND MUSIC

You can listen to background music over the loudspeaker on your phone by pressing a pre-programmed Music key, or by entering the number for the music channel. Please ask your system administrator for the configured number.

Background music 

Press to activate the music (pre-programmed)

The music automatically switches off when you make or receive calls and switches on again when the call is finished.



Press to cancel the music

Note: You can adjust the volume, see section "Audible adjustments".

INTERCOM LINE

A two-way direct call function between two extensions, for instance in executive-secretary communication.

Intercom to Secretary 

Press to establish an intercom call (pre-programmed)



Press to cancel the intercom call

TANDEM CONFIGURATION

The tandem configuration is a unit, consisting of two telephones using the same directory number. One of the telephones is defined as the "Primary" and the other one as the "Secondary".

This function enhances the communication for users that, for example, have a wired phone on their desk (the "primary telephone") and need to be mobile within their company's building with their own portable (the "secondary telephone").

Basically the tandem configuration works as follows:

To activate the tandem configuration

Secondary on/off 

Press (pre-programmed)

or



Dial to log on the secondary telephone

```
10 May 14:10 +15°
2nd USER LOGGED ON
```

For incoming calls:

- Both telephones are treated as 1 single extension.


For outgoing calls:

- Both telephones are treated as 2 separate extensions.

(continued)

TANDEM CONFIGURATION (continued)

To deactivate the tandem configuration

Secondary on/off 

Press (pre-programmed)

or

Dial to log off the secondary telephone

For incoming calls:

- The "secondary" telephone cannot be called and the "primary" telephone works as a normal "stand-alone" telephone.

For outgoing calls:

- Both telephones are treated as 2 separate extensions.

Transferring a call between the members of a tandem unit

Inquiry  


Press and dial own directory number

Transfer 

Press

IMMEDIATE ANSWER

It is possible to get automatic hands-free answering on internal calls without pressing the line key. If you require this facility, please ask your system administrator.

Immediate answer 

Press the immediate answer key (pre-programmed)

Incoming calls will be indicated by one muted ringing signal, the On/Off lamp lights and the call comes straight in through the loudspeaker.

Note: To accept a transferred external call you must first press the Transfer key.

Cancel immediate answer

Immediate answer



Press the immediate answer key (pre-programmed)

The lamp extinguishes.

DIRECT INWARD SYSTEM ACCESS (DISA)

If you are working externally and you have the need to make business calls, call your company and use the company PBX to make an external call to the desired party. You just pay the costs for the phone call to your company. The other costs will automatically be placed on your extension number or on a special project.

Note: To activate this function, you have to change the default password from "0000" to a personal one. Which code to use and how to change it, see section "Select password".

You can also divert calls from your office extension to your external position, see section "Call forwarding".

During the procedure you will be prompted for your password. See last page for a card to remember these specific numbers.



Dial the public number of your company



followed by the DISA number

Ask the system administrator for the defined DISA number.



Dial the external number

or

Use the external diversion function

Procedure, see section "Call forwarding".

Note: If you program a new diversion address, remember to reset it when you return to your office.

AUTOMATED ATTENDANT

The Automated Attendant facility sends voice instructions to external and internal callers, informing them of all possible options they can choose. Voice instructions lead the callers step by step to the desired destination.



Dial the Automated Attendant directory number

Please ask your system administrator for the Automated Attendant directory number.

DOORPHONE

The doorphone is used to monitor the admission to your company, i.e you can open the doorlock from your phone.

Answering door-phone calls



Press the flashing line key

You will be in speech connection with the calling party.

Opening of the doorlock



Press



Dial the door-opener's directory number

Please ask your system administrator for the number.

Note: You can also program the door-opener's directory number as a common abbreviated number or a function key.

NIGHT SWITCHING

If you want this facility, please ask your system administrator. This function is used for directing all incoming calls to one extension (answering position), for example when the office is closed.



Press to activate or deactivate (pre-programmed)

When the lamp lights, night switch is active. When the lights extinguishes, night switch is passive.

NETWORKING

Networking is the connection of several premises within a company. The connection can be set up via leased lines, public lines, Local Area Network (LAN) or Wide Area Network (WAN). Ask your system administrator about details regarding networking.

IP CALLS

IP calls are internal calls sent via an internal data network (LAN or WAN) and the transfer of data and voice is made on the same line. If you are connected to an internal data network the IP connection is made automatically. To minimise the traffic on the network the speech quality is decreased.

If the speech quality is not acceptable you can disconnect the IP call and switch to a non-IP call (alternative network). The switch from the IP net to the non-IP net is made during the call, so the call does not have to be disconnected.

If you want to switch to a non-IP net during the call:

Inquiry 

Press



Dial

During the procedure the other party is put on hold. When the procedure is ready you will receive a special ringing tone and the call is resumed in the non-IP net.

```
15 Sep 10:35 +15°
SPEECH PATH REPLACE
```

Note: A switch to a non-IP call can only be performed if the original call is an IP call, otherwise you will receive a blocking tone.

SECURITY GENERAL

You can block your extension in order to prevent unauthorized use of your telephone, e.g if your external calls are placed on a specific account number.

BLOCK EXTENSION



Dial to block your extension

Verification tone.



Press to finish the procedure

Un-block extension



Dial



Dial your password and press to re-open

Verification tone. Your extension is open for use.



Press to finish the procedure

SELECT PASSWORD

You can use your four-digit password for blocking your phone from unauthorized use, or for making external calls from any blocked extension.



Dial to select a new password



 
Dial your present password and press

The default password is "0000".



Dial your new password and press

Verification tone.



Press to finish the procedure

BYPASS BLOCKED EXTENSION

In order to make a call, you can temporarily bypass a blocked extension.

Bypass own extension

⌘ 7 2 ⌘

Dial

○ ○ ○ ○ #

Dial your password and press

Dial tone. You can make one call from your extension.

Bypass another extension

⌘ 7 2 ⌘

Dial

○ ○ ○ ○ ⌘

Dial your password and press

○ ○ ○ ○ #

Dial your extension number and press

Dial tone. You can make one call from the blocked extension.

LEAST COST ROUTING GENERAL

Least Cost Routing (LCR) automatically selects the cheapest way to establish the connection to the desired external number. Please ask your system administrator if this function is installed in your system.

LEAST COST ROUTING

If the extension has been configured to use LCR, each external call will be analysed and the cheapest way will be selected.

Use least cost routing



Dial the digit(s) for external call access and the external number

The usual way of making an outgoing external call.

Calling least cost routing



Dial the LCR code

Please ask your system administrator for the LCR code.



Dial the digit(s) for external call access and the external number

Note: You can also program the LCR code on a function key.

ISDN FACILITIES GENERAL

Note: This chapter only applies to the Standard telephone.

This chapter is only relevant when your system is connected to a digital trunk line (ISDN-trunk line). It provides a general view of all the (supplementary) services available from the public net which are supported by the system. The services from the public net differ from market to market. Please ask your system administrator which features are available.

NUMBER IDENTIFICATION

The main difference compared to the analogue public net is the number identification between the connected parties.

```
09 Nov 14:40 +15°
431811005446 S
```

When you establish an outgoing external call, the public number of your system and your extension number will be sent to the caller. If the number of the answering party is different from the dialled one (for example, after a diversion), you will also be informed about the answering party's number.

When you answer an incoming external call on your phone (or from another phone), you will see the caller's number on the display. Your public number will be sent to the caller.

NUMBER SECURITY

By pressing a pre-programmed "number secrecy" key you can choose not to show your complete number (public + extension number) to the connected party.

```
09 Nov 14:40 +15°
DISPLAY REST S
```

Number secrecy 

Press a pre-programmed key to suppress your complete number to the public net

The lamp beside the key shows a steady light and the function remains activated until the key is pressed again.

ANSWER AN INCOMING CALL FROM AN ISDN-LINE

A ring signal and a flashing lamp indicates an incoming call, answer the call in the normal way. One of the following four cases will occur.

Example 1 :

The public net provides the number of the caller.

Mr. Plattner with public number
0043 181100 4736 is calling.

```
09 NOV 14:40 +15°  
431811004736 C
```

Example 2 :

The caller has activated "number secrecy".
(The calling number will be suppressed.)

```
09 Nov 14:40 +15°  
DISPLAY REST C
```

Example 3 :

The public net cannot provide the calling number, in this
case the normal number of the external line will be shown.

```
09 Nov 14:40 +15°  
EXTERNAL 701 C
```

Example 4 :

The calling number has been diverted in the public net, the
calling and the diverting number will be shown.

```
43181188  
431811004736 C
```

MAKE AN EXTERNAL CALL ON AN ISDN-LINE

Establish an external call in the normal way.

If the called party is also connected to a digital trunk line, your public number is shown on the called party's display.

If the connected party number differs from the dialled one (for example : diversion or pick up from another extension), your display shows the new number.

Example :

Called Party number 0043 181100 Extension 4736.

```
09 Nov 14:40 +15°
000431811004736 F
```

The desired extension 4736 will be answered by extension 5446.

```
09 Nov 14:40 +15°
000431811005446 S
```

When the connected party has activated "number secrecy" (number suppression), your display shows the following information.

```
09 Nov 14:40 +15°
DISPLAY REST S
```

MALICIOUS CALL IDENTIFICATION

If you are disturbed by malicious external incoming calls, you can request a number tracing from the network provider.

If you cannot see the number of the caller or connected party (because of an activated number suppression), you have the possibility to register the number in the public network during the call.

Malicious call id. 

Press to register the connected number (pre-programmed)

or



Dial to register the connected number

If the function is accepted in the public net, your display shows the following information.

```
MCID ACCEPTED
DISPLAY REST S
```

If you cannot identify the connected party, your display shows the following information.

```
MCID REJECTED
DISPLAY REST S
```

After 3 seconds the display will return to the previous display.

ISDN CALLER LIST

This function will insure that you will not miss any incoming calls, by storing unanswered ISDN calls on your telephone, e.g. if you do not answer or your telephone is busy.

Via your telephone you can:

- See the number of unanswered calls
- Call the stored numbers in the caller list
- Scroll through the caller list
- See the time and date of the arrived calls
- Erase calls from the list

The number of calls in the list are indicated on your display, e.g. "10C" indicates that 10 calls are stored in the list.

```
15 Sep 10:35 +15°
ANDERSEN A 200 10C
```

Retrieve calls



To see the first entry in the caller list:

Press

The display shows the following information, e.g. "1C" indicates the first stored call in the list.

```
431811005446 1C
next: + erase: -
```

Note: If you do not react within 30 seconds the display is returned to idle state. If you want to leave the function before the timeout, press the "Clear"-key.



Press to scroll through the list

(continued)

ISDN CALLER LIST (continued)

Line 1 

Press to call the selected number

When the call is successful, the number is automatically removed from the caller list. The system automatically adds the digit(s) for external call access.

Note: If digit(s) for external call access has not been defined for your caller list, contact your system administrator.


Show date, time and call attempts of the selected call

When you are retrieving calls from your caller list.

0

Press to see the date and time of the selected call

You will see when call was received and how many times the same call came in.

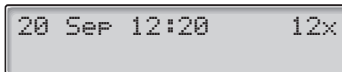

20 Sep 12:20 12x

0

Press to return to the previous display

Erase calls from the caller list

When you are retrieving calls from your caller list.



Press to erase the selected call

The call is erased from the list and the next call is displayed. The display will inform you if there are no more calls in the list.

Note: If you do not react within 5 seconds the display is returned to idle state. If you want to leave the function before the timeout, press the "Clear"-key.

OPTIONAL EQUIPMENT GENERAL

This chapter describes optional features that can be used together with your BusinessPhone telephone.

OPTION UNIT

The Option unit DBY 410 02 is an optional accessory, to be installed on the bottom of your telephone set. The following devices can be installed via the Option unit:

- Tape recorder
- Extra bell or busy indication outside your door
- Enhanced headset functionality or a conference unit
Note: Regarding the headset functions see previous section.
- PC sound card
- Second handset

Note: For people with impaired hearing the Option unit offers the possibility to amplify the receiving volume in the handset and headset.

EXTRA HANDSET

Useful for involving a second person in your conversation, for talking or just listening.

TAPE RECORDER

When a recording of the telephone conversation is needed, for evidence purposes, a tape recorder can be connected.

HEADSET

The following headset functions are available.

Note: To use the headset functions your telephone has to be equipped with option unit DBY 410 02. How to install the option unit, see separate installation instructions provided with the option unit.

Activate/Deactivate the headset

Headset 

Press the headset key to activate/deactivate the headset (pre-programmed)

See section "Description". All calls can be handled via the headset.

Answer calls

Line 1 

Press the flashing line key to answer

C 

Press to terminate a headset call

Make calls



Dial the number

C 

Press to terminate the call

Headset to handset



Lift the handset

Handset to headset

Headset 

Press the headset key (pre-programmed)

Headset with group listening



Press to toggle between headset with or without group listening

Headset to handsfree



Press



Press the headset key (pre-programmed)

Handsfree to headset



Press the headset key (pre-programmed)

CONFERENCE UNIT

For conferences with many participants, the conference unit enhances the speech quality. It provides full duplex and high quality conversation possibilities.

ALARM INTERFACE UNIT

This plug-in module is fitted into the bottom of the telephone. It makes it possible to transfer alarm signals from various devices via the telephone to the exchange and to a pre-defined extension. A special circuit layout provides maximum functional security.

To a telephone fitted with an alarm interface unit you can connect devices such as bathroom alarms for hotel rooms, emergency alarms for hospitals, bank security alarms and supervision of machines.

PROGRAMMING GENERAL

If you require frequent use of certain functions, you may program them on the keys A-D on the telephone. When you want to use the function, just press the key.

 
Note: Programming of dial-by-name keys and individual abbreviated numbers are described in section "Abbreviated numbers" and how to program a new diversion address is described in section "Call forwarding".

PROGRAMMING

How to program a function on key A.



Enter programming mode



Press the desired programmable key



Select function code

See section "Function codes and required data".



Press the programmable key again



Enter associated number

See section "Function codes and required data".



Press the programmable key again

Continue with section "select ringing character"

or



Press to finish programming

After approximately 10 seconds, the function key is active

Note: The dual-function keys allow programmed functions and individual abbreviated numbers to be combined on the same keys. Remove the transparent cover in order to write the names beside the keys. Put the name referring to the programmed function in the field above the line to indicate that it is the primary function.

Select ringing character



Select ringing character (0-4)

See section "Function codes and required data".



Press the programmable key again



Press to finish programming

After approximately 10 seconds, the function key is active.

Example :

Program supervision of extension 204 on key A, with ringing character 1. For available function codes, see section "Function codes and required data".



Enter programming mode



Press the desired programmable key



Select the function code for supervision



Press the programmable key again



Enter extension number



Press the programmable key again



Press to select ringing character



Press the programmable key again



Press to finish programming

FUNCTION CODES AND REQUIRED DATA

Programming name	Function name	Function code	Associated number	Ringing character
NAMECALL	Dial-by-name	10	Extension number	—
SUFFIX DIGIT	Camp-on	11	4	—
	Automatic callback	11	5	—
	Answer calls, another extension	11	6	—
	Radio paging	11	7	—
	Intrusion	11	8	—
	EXTERNAL LINE	External line	12	Directory number of line
SUPERVISION	Supervision/Telephone attendance	13	Extension number	0–4
DEDIC. LINE	Intercom line	14	Extension number	0–4
VOICE PAGING	Loudspeaker paging	15	Number of group (0–7)	—
COMM. MAILBOX	Common mailbox	18	Common mailbox no.	—
SUPERV. SLAVE	Supervision secondary	19	—	0–4
R-KEY	R-key	25	—	—
BUSY LINE 2	Free on 2nd access	26	—	—
CONFERENCE	Conference	27	—	—
IMMED. ANSWER	Immediate answer	28	—	—
ACCOUNT CODE	Account number	30	—	—
OPERATOR HOLD	Operator hold	33	—	—
EXT. VOICE M.	External voice mail	34	—	—
HOLD	Hold	35	—	—
TRANSFER	Transfer	36	—	—
SAVE	Save/Redial	37	—	—
READ &	Read &	38	—	—
* —	* Enter key	39	—	—
NUMB SECRECY	Number secrecy	40	—	—
MALICIOUS-ID	Malicious call identification	41	—	—
LOG ON/OFF SLV	Tandem configuration	43	—	—
CONV. RECORD	Conversation recording	45	—	—

* Function cannot be programmed via individual programming.

Ringing character:

0 =No ringing.

1 =Ringing.

2 =Delayed ringing (after 10 seconds).

3 =One single ringing signal (muted signal).

4 =One delayed ringing signal (after 10 seconds. Muted signal).

Note: Accessible functions, depends on the programming of the system.

 
**DISPLAY INFO
GENERAL**

Note: This chapter only applies to the Standard telephone.


The display assist your actions on the phone with step-by-step instructions.

DISPLAY INFO

When your phone is idle, the upper line shows general information. The lower line shows your name and extension number.



 During an internal call or an incoming external call the lower line shows the other party's name, extension number and status.



Status information

Status information during internal calls:

- NB The called number is blocked.
- B The called extension is busy.
- C Incoming call.
- F The called extension is free.
- F2 The called extension is free on line 2.
- I Intrusion.
- P The called extension has parked the call.
- R Recall from an individually parked call.
- S Speech mode.
- NU Number unknown.
- W Camp on mode.
- ⊗ The called extension has text info stored.
- ⊘ The called extension has voice info stored.
- +15° ° Indicates outside temperature and tendency (up or down) if your telephone system is equipped with optional temperature sensor.

VISIBLE SIGNALS GENERAL

The key lamps on your telephone indicates with different signals the traffic state of the ongoing call or function.

LAMP INDICATIONS



Extinguished lamp

The function is not active.



Steady light

The function is active.



Slowly flashing lamp

The line (or function) is put on hold.



Rapidly flashing lamp

An incoming call or message waiting.



Light with short breaks

Ongoing call.

AUDIBLE ADJUSTMENTS GENERAL

In order to satisfy your personal needs, the BusinessPhone 250 / BusinessPhone 50 system is equipped with many options to set and adjust a personal volume and ringing signal.

HANDSET AND LOUDSPEAKER VOLUME

Use the volume keys. You can set different volume levels for internal and external calls and for background music. During a call, adjust handset listening volume in handset mode. Adjust loudspeaker volume in monitor mode or during background music.



Press to change the volume

RINGING SIGNAL

By programming, you can adjust ringing type (2 types), ringing volume (10 steps) and ringing character (10 characters).



Enter programming mode

Now you can select ringing type, volume or character.

Ringing type

Select type 1 if you want the set ringing volume at a constant level, select type 2 if you want gradually increasing volume when the phone rings.



Press

or



Press

You will hear the selected type.



Press to finish the procedure

Note: When type 2 is selected, the programming of the ringing volume is not applicable.

(continued)

RINGING SIGNAL (continued)

Ringing volume

2 * 0 — 9

Press

You will hear the selected volume (0...lowest volume, 9...highest). You only have to press the last digit to select another ringing volume.



Press to finish the procedure

Note: This programming is not applicable when you have selected ringing type 2.

Ringing character

3 * 0 — 9

Press

You will hear the selected character. You only have to press the last digit to select another ringing character.



Press to finish the procedure

MELODY PROGRAMMING

If you want a personal melody when your telephone rings, this can be programmed for internal-, external- or call-back calls.

Note: This function requires a certain release number of your telephone (for the Standard telephone it is R7B or higher and for the Economyplus telephone it is R6B or higher, see under side of your phone). If you can enter "Melody mode" your telephone supports this function.

Melody mode



Press and hold to enter melody mode

Enter programming mode to program a melody

or



Press to exit melody mode

Programming mode



Press to enter programming mode

Select the call type you want to program



Press for internal calls

or



Press for external calls

or



Press for call-back calls

Select programming mode options to control the melody

(continued)

MELODY PROGRAMMING (continued)

Programming mode options

Insert notes



Press to insert notes

1=c, 2=d, 3=e, 4=f, 5=g, 6=a, 7=b, 8=+c, 9=+d

Note: If you press and hold a key you make a long tone (shown with a capital letter e.g. D).

Change the pitch steps



Press to change

Press once for sharp pitch, twice for flat pitch and three times to get the normal pitch.

Insert a pause



Press to insert a short pause

Hold the key to get a long pause.

Change the octave



Press to get a higher or lower octave for the note you have inserted

It is higher when a plus sign is added beside the note.

Scroll within the melody



Press to move the cursor within the melody

Hold the key to move to the beginning or the end.

Erase note or melody



Press to erase the note to the left of the cursor

Press and hold to erase the whole melody.

Store the melody

Line or inquiry 

Press the flashing line key

Exit program mode

2nd 

Press to exit program mode

You enter melody mode. How to exit melody mode, see section “Melody mode”.

TONES AND SIGNALS

Tones are audible in the handset. Ringing signals are emitted from the phone. You can adjust the tones and signals on your phone. See section "Audible adjustments".

Dial tone

(System ready to accept digits)



Special dial tone

(System ready to accept digits, active diversion on telephone)



Ringing tone

(Ringing signal to called party)



-repeated after 4 s

Special ringing tone

(Ringing signal to line 2)



-repeated after 4 s

Busy tone

(Called party is busy)



Number unobtainable tone

(Called number not accessible or vacant)



Blocking tone

(Call cannot be executed due to congestion or called party blocked)



Verification tone

(Verification that ordered function is accessed)



Intrusion tone

(Sent to all parties during intrusion)



Conference tone

(Sent to all participants in a conference)



-repeated after 15 s

Internal ringing signal



-repeated after 4 s

External ringing signal



-repeated after 4 s

Automatic call-back signal



Note: The tones and ringing signals in this guide refer to the standard system but may vary between countries.

GLOSSARY

**ABBREVIATED NUMBER
DIALLING**

Initiating a call to a pre-programmed number by dialling a code or pressing a key. Short numbers can be: 1. *Common, which means that all extensions can use them.* 2. *Individual, which means that they are programmed and used by each extension separately (14 numbers).* See section "Abbreviated numbers".

ACCOUNT NUMBER

To place costs for external calls on a selected account number (up to 15 digits). See section "Other useful facilities".

AUTOMATED ATTENDANT

A facility which sends voice instructions to internal and external callers, providing all options which can be chosen. Voice instructions lead the caller to the desired destination. See section "Other useful facilities".

CALL-BACK

An indication to a busy extension, to inform the person that you want to speak to him/her. See sections "Internal messages" and "Outgoing calls".

CAMP ON

To place (queue) a call to a busy extension. See section "Outgoing calls".

COUNTER

The counter keeps track of the time and cost of your calls. See section "Call metering".

DIAL-BY-NAME

Initiation of a call by operating a single key. Internal numbers (or common abbreviated numbers) can be stored on each extension. See section "Abbreviated numbers".

DIRECTORY NUMBER

Numbers with 1-8 digits which are assigned to extensions or external lines or as common abbreviated numbers.

**DIRECT INWARD
SYSTEM ACCESS (DISA)**

If you are working externally, the DISA function enables you to make external calls (long distance) via the company PBX. You only pay for the call to your company. See section "Other useful facilities".

DIVERSION

Incoming calls to an extension are diverted to another directory number (extension, common abbreviated number or the operator). There are three possibilities: 1. *Direct, which means that all calls to an extension are forwarded directly.* 2. *On no reply, which means that a call is forwarded if it is not answered within a certain time.* 3. *On busy, which means that a call is forwarded if the extension is busy.* See section "Call forwarding".

DIVERSION BYPASS

This is useful for letting urgent calls through to an extension where diversion is active. See section "Call forwarding".

EXTENSION

All telephones connected to the PBX have a unique internal number (upto 8 digits). If your telephone is equipped with a display, you can see your number.

FUNCTION CODE

A digit code that corresponds to a specific function. See section "Programming".

HOLD

To park a call. See section "During calls".

INFORMATION

Internal callers are informed about absence and time of return. External callers are diverted to the operator, where the same information is available. Information can be of two kinds: 1. *Pre-programmed text information.* 2. *Voice information.*

INTERCOM LINE

A two-way direct call function between two extensions, for instance an executive-secretary communication. See section "Other useful facilities".

INTRUSION


To intrude on an ongoing call when a requested extension is busy. See section "Outgoing calls".

(continued)


GLOSSARY (continued)

IP CALL	Internal call sent via an internal data network (LAN or WAN).
ISDN	Integrated Services Digital Network. Provides your system with supplementary services from the public net. See section "ISDN facilities".
LEAST COST ROUTING	A function that automatically selects the cheapest way to connect your external call (not necessarily the shortest distance). See section "Least cost routing".
LOUDSPEAKER PAGING	All members of an extension group are "paged", i.e. receive a short, sharp tone on the loudspeaker followed by a voice message from the sender. See section "Group facilities".
MAILBOX	The mailbox system controls the messages that are left for or sent by you when you are absent. See section "Mailbox system".
MESSAGE	A message can be sent to any extension. This is useful when you receive the busy tone or get no answer. There are two kinds of message: 1. "Call me" message. 2. Voice message. See section "Internal messages".
METERING	Outgoing external calls can be metered on individual call meters or specified account numbers. See section "Call metering".
MUTE	To switch the microphone temporarily off. See section "During calls".
NIGHT SWITCHING	Used for directing all incoming calls to one extension (answering position), for example when the office is closed. See section "Other useful facilities".
PASSWORD	A four-digit code needed to e.g. block your extension and retrieve messages from the mailbox system. You can set your own password. See section "Security".
PBX	Public Branch Exchange. Your telephone switching system (e.g. BusinessPhone 250).
PRE-DEFINED TEXT	Pre-programmed absent information. See section "Information".
THIRD PARTY	A third connection (person), which can be included in an ongoing two person conversation. The connection can be internal or external. See section "During calls".
TIE LINE	An external line from the private network.
TRANSFER	During an internal or external ongoing call you can make an inquiry and then transfer the call to another party (internal or external). See section "During calls" and "Useful hints".
TRUNK LINE	A trunk line is the same as an external line. Can be either digital or analogue.

 INSTALL STAND

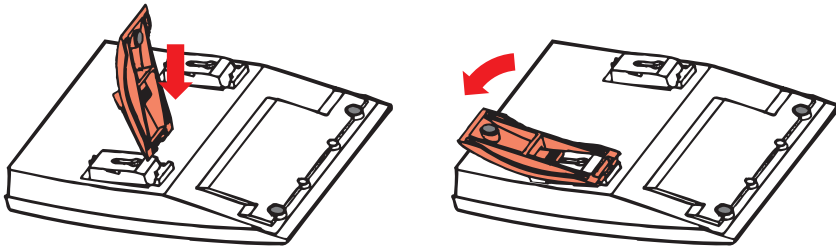


INSTALL CABLES

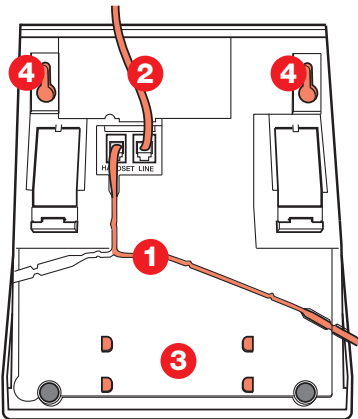 

- 1 Cable to handset
- 2 Cable to exchange
- 3 Space for personal number directory (optional)
- 4 Wallmounting screw holes

 Wall
mounting
handset hook

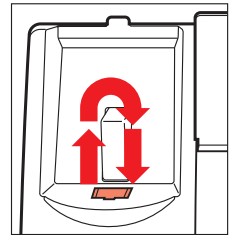

You can put the cable to the handset in any of the two notches underneath the telephone. The cable to the exchange has to be plugged in "LINE".

 
Change cables

To remove a cable, push down the plug's stop. Use a screw-driver to unlock the stop.

PLACING THE TELEPHONE

- Do not place your telephone on sensitive surfaces. Use a non-slippery pad to protect your furniture from possible damage.
- Do not place your telephone near sources of extreme heat, e.g. near the radiator.
- Make sure that the line cable isn't creased.

ADJUST TELEPHONE

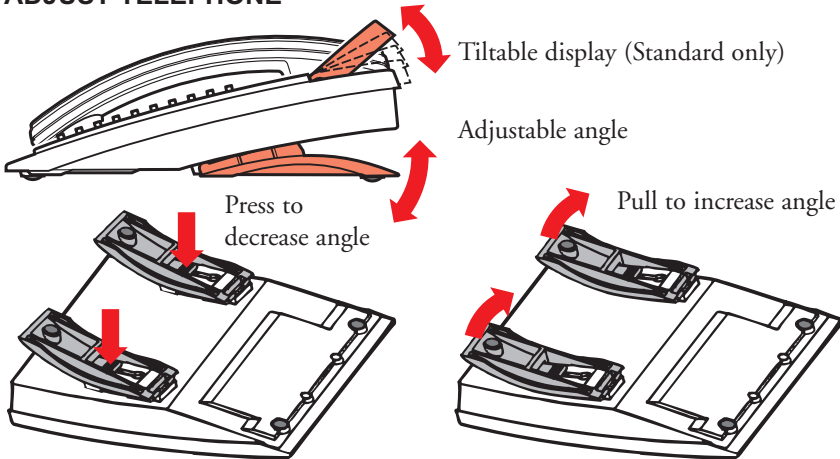

CLEANING THE TELEPHONE

Use a slightly moistened (not wet) cleaning-rag or an anti-static rag and wipe off the telephone carefully. Do not use rough rags, solvents or aggressive cleaning fluids. Any damages of the telephone, that are caused by non-observance of these instructions, are not part of the liability given by the manufacturer.

CONNECTIONS BETWEEN EXTERNAL LINES

With your BusinessPhone PBX, you can establish an external call diversion or a conference with more than one external party or transfer an external call too another external destination (e.g. a mobile phone). These features are very useful for everyday business life.

Note: When these features are used, your BusinessPhone will occupy at least two external lines.

However, there may be disadvantages in connecting to several external lines. We would therefore like to draw your attention to the following:

- **Please do not transfer external calls to an external mailbox, to information systems or to external parties before they have answered**
- **Try to avoid diverting calls to third parties before they have answered**
- **Cancel your calls by pressing the "Clear"-key**

If the external parties are not persons (mailbox, automated information or attendant systems, etc.), connections on external lines can last a long time, which can be costly. Moreover, such calls may occupy two of your system's external lines. You can restrict connections between the external lines by re-programming your system.

Please ask your system administrator or contact our service center for more information.

	Page		Page
Abbreviated numbers.....	35	Display info.....	67
Absent information.....	23	Diversion.....	17
Account number.....	46	Diversion information.....	26
Adjust telephone.....	78	Doorlock.....	50
Alarm interface unit.....	63	Doorphone.....	50
Answer a second call.....	8	During calls.....	12
Answer an incoming call from an ISDN-line.....	56	Enter information.....	23
Answer calls.....	7	Erase information.....	25
Answer paging calls.....	44	External calls.....	9
Audible adjustments.....	69	External calls on an ISDN-line.....	57
Automated attendant.....	50	Extra handset.....	61
Automatic call-back.....	10	Fixed diversion.....	17
Background music.....	46	Follow me.....	21
Block extension.....	52	Free on 2nd access.....	8
Busy extension.....	11	Function codes and required data.....	66
Bypass blocked extension.....	53	Glossary.....	75
Bypass call forwarding.....	22	Group call pick up.....	43
Call forwarding.....	17	Group facilities.....	40
Call metering.....	39	Group hunting.....	42
Call-back.....	10	Group listening.....	12
Camp-on.....	11	Group paging.....	44
Change cables.....	77	Handset and loudspeaker volume.....	69
Check and store received messages.....	28	Handset to handsfree.....	12
Cleaning the telephone.....	78	Handsfree to handset.....	12
Common abbreviated numbers.....	35	Handsfree, incoming calls.....	7
Common bell.....	44	Handsfree, outgoing calls.....	9
Common hold.....	16	Headset.....	62
Common mailbox system.....	32	Hold.....	15
Conference.....	15	Immediate answer.....	48
Conference unit.....	63	Incoming calls.....	7
Conversation recording.....	30	Individual abbreviated numbers via a programmable key.....	35
Cost indication.....	39	Individual abbreviated numbers via the keypad.....	37
Cost of the last call.....	39	Individual hold.....	15
Counter.....	39	Individual mailbox system.....	31
Description.....	5	Information.....	23
Dial-by-name.....	38	Inquiry.....	13
Dictaphone.....	29	Install cables.....	77
Direct Inward System Access (DISA).....	49		

	Page		Page
Install stand	77	Placing the telephone.....	78
Installation.....	77	Pre-defined texts	24
Intercom line	47	Program fixed diversion address	18
Internal calls	9	Programming.....	64
Internal messages	27	Public net functions.....	55
Intrusion.....	11	Read out your own cost counter	39
IP calls	51	Receive info for diverted calls	26
ISDN caller list.....	59	Redial number	10
ISDN facilities	55	Refer back.....	13
Key system.....	40	Reminder.....	45
Lamp indications	68	Ring character.....	70
Last external number redial.....	9	Ring signal.....	69
Least Cost Routing	54	Ring type.....	69
Loudspeaker paging	44	Ring volume	70
Mailbox system.....	31	Save external number.....	10
Make an external call on an ISDN-line	57	Save information.....	25
Make calls.....	9	Second telephone.....	47
Malicious call identification	58	Security.....	52
Melody programming.....	71	Select password	52
Messages	27	Send message	27
Music.....	46	Short numbers	35
Mute.....	13	Supervision/telephone attendance.....	41
Networking.....	51	Tandem configuration	47
Night switching.....	50	Tape recorder	61
Number identification	55	Tones and signals.....	74
Number secrecy	55	Transfer.....	14
Opening of the doorlock	50	Two telephones.....	47
Option unit	61	Un-block extension.....	52
Optional equipment	61	Useful hints	79
Other useful facilities.....	45	Visible signals	68
Outgoing calls	9	Voice information	25
Paging group.....	44	Voice messages	27
Password	52	Volume	69
Personal greeting.....	34	When you receive busy tone.....	11


ANSWER CALLS


Answer:  or **Line 1** 

Answer on another extension:  (Call ringing extension) **6**



MAKE CALLS

 


Normal calls:  (Extension no.) or



0  (External no.)



Common abbreviated number:  (Abbreviated no.)

Dial by name: **Ericsson** 

Individual abbreviated number: **2'nd**  **Airport** 

Last external number redial:   

Save external number: **2'nd**  **Save/Redial** 
(Before you finish the call)

Redial: **2'nd**  **Save/Redial** 



YOU GET BUSY TONE OR NO ANSWER


Automatic call-back: **5** 
(Lift handset when called back)

Camp on: **4** (Keep handset off hook)

Intrusion: **8**

DURING CALLS



Switch to handsfree (Dialog 3211 & 3212 only):  

Switch to handset (Dialog 3211 & 3212 only): 

Group Listening: 




Individual hold: **Line 1**  (Flashing key to retake)

INQUIRY





Ongoing conversation: **Inquiry**  
(Call 3rd party)

Back to first party:  **Line 1**  



REFER BACK

Press flashing key to connect: **Line 1**  or **Line 2** 
or **Inquiry** 

CONFERENCE

Ongoing conversation: **Inquiry**  
(Call 3rd party) **2'nd** 
Conference 

TRANSFER

Transfer a call: **Inquiry**  
(Call 3rd party)

Transfer  or
 (Before or after answer)

MESSAGES

"Call me": **Message**  **#**

Voice: **Message**  **9** *Speak*

 
Play-back: 




Re-record: **9** *Speak*

Send: **#**



Check received messages: **Message** 


CALL FORWARDING



Fixed diversion: **2'nd**  **Diversion** 

 Individual internal diversion:  **2'nd** 
Diversion   (New no.)


2'nd  **Diversion** 


Cancel internal diversion: **2'nd**  **Diversion** 

Follow me, re-direct from answering extension:  **2** **1** 

 (Own no.) 

 (New no.) **#**







Cancel from answ. extension: **#** **2** **1** 

 (Own no.) **#**

Bypass call forwarding:  **6** **0** 

 (Extension no.) **#**

INFORMATION

Enter information (pre-text): **2'nd**  **Info**  
 (Enter "info code" + "completing info"
from list below) **#**  

Erase information: **2'nd**  **Info** 
0 **#**

	info code	completing info
Time of return	1.	hour (00-23) minute (00-59)
Date of return	2.	month (01-12) day (01-31)
Lunch	3.	back at, hour minute
Meeting	4.	back at, hour minute
Vacation	5.	back, month day
Illness	6.	back, month day

IMPORTANT NUMBERS

IMPORTANT NUMBERS

Number

Function

.....	Account number 1
.....	Account number 2
.....	Automated attendant
.....	Background music number
.....	Common bell
.....	Common mailbox number
.....	Direct inward system access (DISA)
.....	Doorphone
.....	External line number 1
.....	External line number 2
.....	Group call pick-up
.....	Individual mailbox number
.....	Least cost routing
.....	Password
.....	Tie line number 1
.....	Tie line number 2

POST DIALLING DIGITS

Number

Function

.....	Answer calls on another extension
.....	Automatic call-back
.....	Call waiting
.....	Camp-on
.....	Intrusion
.....	Radio paging

ABBREVIATED NUMBERS

Common Abbreviated Numbers

.....
.....
.....


Individual Abbreviated numbers

⊛	⊛	0
⊛	⊛	1
⊛	⊛	2
⊛	⊛	3
⊛	⊛	4
⊛	⊛	5
⊛	⊛	6
⊛	⊛	7
⊛	⊛	8
⊛	⊛	9


QUICK REFERENCE CARD

These cards are used for DISA and to check messages.

 
DISA and Message check:

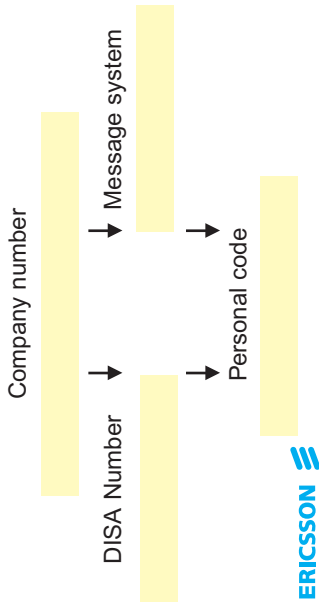


DISA and Message check:

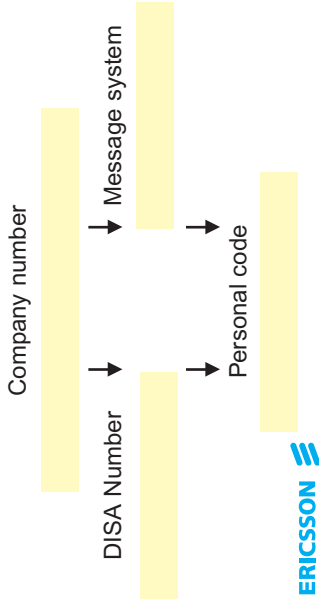 

DISA and Message check:

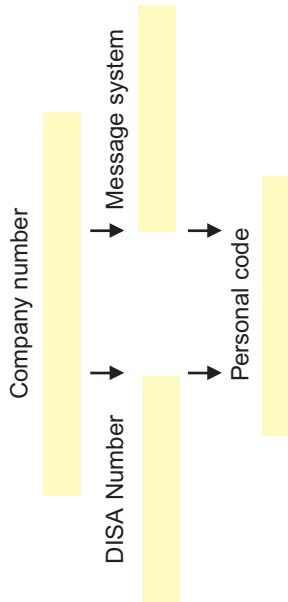 

DISA and Message check:

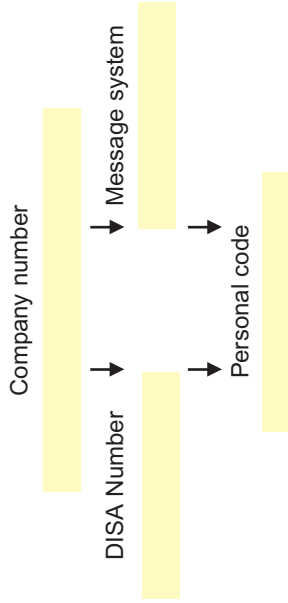 

QUICK REFERENCE CARD

Special account numbers for business calls:

Project name	Account number
1	→
2	→
3	→
4	→

business phone
...it's your business

This is a part of EN/LZTBS 102 095 R5A

Special account numbers for business calls:

Project name	Account number
1	→
2	→
3	→
4	→

business phone
...it's your business

This is a part of EN/LZTBS 102 095 R5A

Special account numbers for business calls:

Project name	Account number
1	→
2	→
3	→
4	→

business phone
...it's your business

This is a part of EN/LZTBS 102 095 R5A

Special account numbers for business calls:

Project name	Account number
1	→
2	→
3	→
4	→

business phone
...it's your business

This is a part of EN/LZTBS 102 095 R5A

Communication is our business

Ericsson is the leading communications supplier, combining innovation in mobility and Internet in creating the new era of mobile Internet. Ericsson provides total solutions covering everything from systems and applications to mobile phones and other communications tools. With more than 100,000 employees in 140 countries, Ericsson simplifies communications for customers all over the world.

Read more at <http://www.ericsson.com/pressroom>

Austria

Ericsson Austria AG
Pottendorfer Strasse 25-27
A-1121 Vienna, Austria
Telephone: +43-1-81 100-5450
Telefax: +43-1-81 100-5437
<http://www.ericsson.at>

Australia

Ericsson Australia Pty Ltd.
Ericsson Business Systems
126-142 Trenerry Crescent
Abbotsford Vic 3067, Australia
Telephone, sales: +61-13-1374
Service: +61-1800-033-216
Telefax: +61-9284-5776
<http://www.ericsson.com.au/AU/>

United Kingdom

Enterprise Distribution
Enterprise Networks and Datacomms
Telecommunications Centre
Ericsson Way, Burgess Hill
West Sussex RH15 9UB
Telephone: +44-(0)1444-234567
Telefax: +44-(0)1444-874299
<http://www.ericsson.co.uk>

EN/LZTBS 102 095 R5A
© Ericsson Austria AG 2000